

<b>4</b>	
4WD-ECU.....	22A-236
<b>A</b>	
A/C Switch.....	55-99
A/C system.....	13A-821
ABS	
Actuator Test.....	35B-102
Circuit Diagram.....	90-116
ECU, Check at Terminal.....	35B-102
ABS Sensor.....	35B-113
Accelerator Cable	
Check and Adjustment.....	17-4
Accelerator Cable and Pedal.....	17-5
Accessory Socket.....	54A-101
Accessory Socket	
Removal and Installation.....	54A-101
ACD	
Circuit Diagram	
Vehicles with ABS.....	90-130
Vehicles without ABS.....	90-122
ACD Operation.....	22A-210
Adhesive	
Body.....	42-77
Brakes (Basic).....	35A-39
Engine.....	11A-64
Engine Cooling.....	14-32
Engine Lubrication.....	12-7
Engine Overhaul.....	11B-82
Exterior.....	51-39
Manual Transaxle Overhaul <W6MAA>.....	22C-48
Manual Transaxle Overhaul <W5M51>.....	22B-55
MFI.....	13A-890
Propeller Shaft.....	25-13
Rear Axle.....	27-57
Steering.....	37-57
Adhesive Table.....	00-53
Adhesives	
Equipment.....	54A-176
Air Bag Module	
Disposal Procedures.....	52B-180
Air Bag Modules.....	52B-168
Air Cleaner.....	15-7
Air Cleaner Element	
Replace.....	00-40
Air Conditioning	
Charging.....	55-94
Compressor Drive Belt Adjustment.....	55-94
Compressor Noise Check.....	55-97
Condenser and Condenser Fan Motor.....	55-116
ECU Terminal Check.....	55-91
Idle-up Operation Check.....	55-98
Manual, Circuit Diagram.....	90-94
Performance Test.....	55-95
Power Relay Check.....	55-97
Pressure Switch Check.....	55-94
Receiver Drier Test.....	55-93
Refrigerant Leak Repair.....	55-96
Refrigerant Line.....	55-118
Sight Glass Refrigerant Level Test.....	55-93
Air Dam.....	51-7
Air Purifier Filter	
Replace.....	00-52
Amplifier	
VEHICLES WITH AMPLIFIER.....	54A-170
Antenna.....	54A-171
Anti-Lock Braking System (ABS)	
Diagnosis.....	35B-4
Anti-Theft Code for Anti-Theft System	
Procedure for Input.....	54A-163
Assist Link.....	34-16
Assist Link Ball Joint Cover	
Replacement.....	34-20
Audio System	
Circuit Diagram	
VEHICLES WITH AMPLIFIER.....	90-110
VEHICLES WITHOUT AMPLIFIER.....	90-106
<b>B</b>	
Backup Light	
Circuit Diagram.....	90-65
Ball Joint Dust Cover	
Inspection <Front suspension>.....	33-9
Inspection <Rear suspension>.....	34-7
Replacement.....	34-12
Replacement.....	34-27
Replacement.....	34-15
Replacement.....	33-16
Ball Joint Dust Cover Inspection	
Steering.....	37-23
Ball Joint Dust Cover Replacement	
Steering.....	37-48
Ball Joint Seals	
Check.....	00-51
Barometric Pressure Sensor	
Check.....	17-15
Basic Brake System	
Diagnosis.....	35A-4
Basic Idle Speed	
Adjustment.....	13A-864
Battery	
Charging.....	54A-5
Check.....	54A-4
Handling.....	00E-12
Remedy for a Discharged Battery.....	35B-110
Test.....	54A-5
Belt	
Water Pump and Generator Drive Belt Check.....	00-41
Belt, Timing	
Replace.....	00-41
BJ Boot	
Replacement.....	26-20
Bleeding.....	22A-209
Bleeding	
Brakes (Basic).....	35A-17
Power Steering.....	37-20
Blower.....	55-105
Blower Assembly.....	55-103
Blower Motor	
Removal and Installation.....	55-106
Blower Resistor	
Removal and Installation.....	55-106
Body	
Adhesive.....	42-77
Diagnosis.....	42-4
Sealant.....	42-77
Boots	
Driveshaft, Check.....	00-51
Brake Booster.....	35A-26
Brake Booster	
Operating Check.....	35A-15

Brake Disc		Clutch	21B-2
Pad Wear Check	00-50	Clutch	
Runout Check and Correction	35A-22	Diagnosis	21A-2
Thickness Check	35A-21	Inspection	21B-5
Brake Fluid Level Sensor Check	35A-18	Clutch Bleeding	21A-8
Brake Hoses		Clutch Control	21A-11
Check	00-50	Clutch Control	
Brake Pad		Inspection	21A-11
Wear Check	00-50	Clutch Housing <W5M51>	22B-41
Brake Pedal	35A-24	Clutch Housing <W6MAA>	22C-36
Brake Pedal		Clutch Housing	
Check and Adjustment	35A-13	Disassembly and Assembly <W5M51>	22B-41
Brake Rotor		Disassembly and Assembly <W6MAA>	22C-36
Disc, Check	35A-21	Clutch Master Cylinder	
Brake Warning Light		Inspection	21A-13
Circuit Diagram	90-74	Clutch Pedal	21A-9
Brakes (Basic)		Clutch Pedal	
Adhesive	35A-39	Check and Adjustment	21A-6
Sealant	35A-39	Inspection	21A-10
Bumper		Clutch Pedal Position Switch	
Front	51-2	Check	13A-876
Rear	51-5	Clutch Release Cylinder	21B-7
		Clutch Release Cylinder	
		Inspection	21B-8
		Column Switch	54A-96
		Column Switch	
		Removal and Installation	54A-97
		Combination Meters	54A-48
		Compression Pressure	
		Check	11A-10
		Compressor (A/C)	
		Noise Check	55-97
		Compressor Assembly	55-111
		Connecting Rod	
		Overhaul	11B-61
		Connector Inspection	00E-2
		Control Housing	22B-38
		Control Housing	
		Disassembly and Assembly	22B-38
		Control Unit Location	70-12
		Coolant	
		Engine, Change	00-48
		Coolant Hoses	
		Heater Hose Inspect	00-49
		Radiator Hose Inspect	00-49
		Cooling System	
		Circuit Diagram	90-41
		Crankcase Ventilation System	
		Check	17-11
		Crankshaft	
		Overhaul	11B-70
		Crankshaft Oil Seal	11A-39
		Crankshaft Position Sensor	16-41
		Crankshaft Position Sensor	
		Check	17-20
		Crankshaft Pulley	11A-23
		Crossmember	32-9
		Crossmember	
		Inspection	32-12
		Crossmember Bar	33-23
		Cylinder Block	
		Overhaul	11B-70
		Cylinder Head	
		Overhaul	11B-42
		Cylinder Head Gasket	11A-42

## C

Cable	
Accelerator	17-5
Accelerator, Check and Adjustment	17-4
Camshaft	11A-25
Camshaft	
Overhaul	11B-35
Camshaft Position Sensor	16-40
Camshaft Position Sensor	
Check	16-35
Canister	
Evaporative Emission	17-21
Catalytic Converter	17-24
Caution Labels	55-4
Center Differential <W6MAA>	22C-41
Center Differential <W5M51>	22B-48
Centermember	32-7
Central Door Locking System	54B-84
Central Door Locking System	
Circuit Diagram	
VEHICLES WITH KEYLESS ENTRY SYSTEM	90-84
VEHICLES WITHOUT KEYLESS ENTRY SYSTEM	90-80
Diagnosis	
Vehicles with central door locking system	42-24
Centralized Junction	
Circuit Diagram	90-18
Charge Air Cooler	15-8
Charging System	16-2
Charging System	
Circuit Diagram	90-31
Diagnosis	16-4
Check Valve	
Check	17-15
Operating Check	35A-16
Cigarette Lighter	54A-101
Cigarette Lighter	
Circuit Diagram	90-114
Removal and Installation	54A-101
Clearance Around Hood	
Adjustment	42-6
Clock	54A-103
Clock	
Circuit Diagram	90-113
Clock Spring	52B-168

**D**

Diagnosis	
Anti-Lock Braking System (ABS).....	35B-4
Basic Brake System .....	35A-4
Body .....	42-4
Central Door Locking System	
Vehicles with central door locking system .....	42-24
Charging System .....	16-4
Clutch .....	21A-2
Door .....	42-24
Emission Control System .....	17-6
Engine .....	11A-2
Engine Control System.....	17-3
Engine Cooling .....	14-3
Equipment	
<Combination meter assembly and vehicle speed sensor> .....	54A-48
Equipment <Horn> .....	54A-99
Equipment <Ignition key reminder tone alarm>.....	54A-7
Exterior .....	51-20
Front Axle .....	26-2
Front Suspension .....	33-3
Fuel Supply.....	13B-2
Immobilizer System .....	54A-8
Intake and Exhaust.....	15-2
Keyless Entry System	
Vehicles with keyless entry system.....	42-57
Manual Transaxle	
M/T.....	22A-200
Multiport Fuel Injection (MFI).....	13A-12
Parking Brake.....	36-2
Power Steering .....	37-3
Power Window	
Vehicles with power window .....	42-24
Propeller Shaft.....	25-2
Radio With Tape Player and CD Player, Speaker and Antenna.....	54A-104
Rear Axle.....	27-2
Rear Suspension .....	34-3
Seat Belt.....	52A-2
SRS Air Bag .....	52B-18
Starting System .....	16-22
Sunroof .....	42-66
SWS .....	54B-9
Tire .....	31-2
Trouble Code, ABS.....	35B-5
Trunk Lid.....	42-50
Wheel .....	31-2
Window Glass.....	42-14
Differential Carrier	
Rear.....	27-30
Differential Carrier Oil Seal	
Replacement .....	27-15
Differential Support Member Bushing	
Replacement .....	27-32
Disc Brake	
Pad Wear Check .....	00-50
Disc Brake Assembly	
Front.....	35A-29
Rear.....	35A-33
Disc Brake Pad	
Check and Adjustment .....	35A-19
Disc Brake Rotor	
Check .....	35A-21
Dome Light.....	54A-91
Dome Light	
Circuit Diagram.....	90-56
Door.....	42-24

Door	
Diagnosis.....	42-24
Front and Rear, Fit Adjustment.....	42-31
Glass and Regulator .....	42-38
Handle and Latch.....	42-43
Inside Handle Play Adjustment.....	42-35
Mirror .....	51-35
Opening Weather-strip.....	42-47
Outside Handle Play Adjustment .....	42-35
Switch Check .....	42-37
Door Sash Tape.....	51-11
Door Trim.....	52A-13
Door Trim	
Removal and Installation .....	52A-13
Drive Belt	
Power Steering, Tension Check.....	37-19
Tension Check and Adjustment .....	11A-8
Water Pump and Generator Drive Belt Check .....	00-41
Drive Plate	
Overhaul .....	11B-70
Driveshaft	
BJ Boot Replacement.....	26-20
Front Axle .....	26-13
Rear Axle.....	27-22
Driveshaft Boots	
Check.....	00-51
Drum	
Inspection .....	36-10

**E**

ECU Terminal	
Check.....	54A-36
Check.....	54B-541
EGR	
Solenoid Check.....	13A-880
EGR solenoid	
Check.....	13A-880
EGR System.....	17-16
EGR System	
Check.....	17-17
Port Vacuum Check .....	17-18
Solenoid Check.....	17-19
Valve Check.....	17-18
Electrical System	
Check.....	00E-12
Element, Air Cleaner	
Replace.....	00-40
Emission Control .....	17-6
Emission Control System	
Diagnosis.....	17-6
Emission Control System, Evaporative	
Check for Clogging .....	00-40
Check for Leaks.....	00-40
Engine	
Adhesive .....	11A-64
Assembly .....	11A-15
Compression Pressure .....	11A-10
Crankshaft Oil Seal.....	11A-39
Cylinder Head Gasket.....	11A-42
Diagnosis .....	11A-2
Drive Belt .....	11A-8
Idle Mixture .....	11A-9
Idle Speed .....	11A-10
Ignition Timing.....	11A-8
Lash Adjuster.....	11A-12
Manifold Vacuum .....	11A-12
Sealant.....	11A-64
Tightening Specifications .....	11A-61
Timing Belt .....	11A-48

Engine Control.....	17-3
Engine Control Module.....	13A-887
Engine Control Relay.....	13A-886
Engine Control Resistor.....	13A-886
Engine Control System	
Diagnosis.....	17-3
Engine Coolant	
Change.....	00-48
Concentration Check.....	14-20
Leak Check.....	14-18
Replacement.....	14-19
Engine Coolant Temperature Gauge Unit	
Check.....	54A-75
Engine Coolant Temperature Sensor	
Check.....	13A-872
Check.....	17-15
Engine Cooling	
Adhesive.....	14-32
Diagnosis.....	14-3
Sealant.....	14-32
Engine Lubrication	
Adhesive.....	12-7
Sealant.....	12-7
Tightening Specifications.....	12-7
Engine Mounting.....	32-3
Engine Mounting	
Inspection.....	32-4
Engine Oil	
Change.....	00-43
Check.....	12-3
Replacement.....	12-3
Engine Oil Control Valve	
Check.....	13A-879
Engine Oil Cooler.....	12-6
Engine Oil Filter	
Change.....	00-44
Replacement.....	12-4
Engine Oil Pressure	
Check.....	12-4
Engine Overhaul	
Adhesive.....	11B-82
Sealant.....	11B-82
Tightening Specification(s).....	11B-76
Engine Roll Stopper.....	32-7
Equipment	
Adhesives.....	54A-176
Diagnosis	
<Combination meter assembly and vehicle speed sensor>.....	54A-48
Diagnosis <Ignition key reminder tone alarm>.....	54A-7
Diagnosis <Horn>.....	54A-99
Sealant.....	54A-176
ETACS	
Enabling/Disabling the Answerback Function	
Vehicles with keyless entry system.....	42-59
Evaporative Emission Canister.....	17-21
Evaporative Emission Control System.....	17-12
Evaporative Emission Control System	
Check for Clogging.....	00-40
Check for Leaks.....	00-40
Purge Solenoid Check.....	17-14
Evaporative Emission Purge Solenoid	
Check.....	13A-880
Evaporative Emission Ventilation Solenoid	
Check.....	13A-880
Check.....	17-15
Evaporator Assembly.....	55-109
Evaporator Unit.....	55-103
Exhaust Manifold.....	15-13
Exhaust Manifold	
Overhaul.....	11B-31
Exhaust Pipe.....	15-17
Exhaust System	
Check.....	00-43
Exterior	
Adhesive.....	51-39
Diagnosis <Rear wiper and washer>.....	51-29
Diagnosis <Windshield wiper and washer>.....	51-20
Sealant.....	51-39
<b>F</b>	
Fan Control Relay	
Continuity Check.....	14-21
Fan Controller	
Check.....	14-20
Fastener Tightening Specifications.....	34-28
Fender.....	42-8
Filter	
Air Purifier, Replace.....	00-52
Engine Oil, Change.....	00-44
Flasher Timer.....	54B-342
Fluid	
Check.....	22A-208
Flywheel	
Overhaul.....	11B-70
Fog Light.....	54B-380
Fog Light	
Aiming.....	54A-82
Circuit Diagram.....	90-60
Front Axle	
Diagnosis.....	26-2
Driveshaft.....	26-13
Hub.....	26-8
Front Axle Hub Assembly.....	26-8
Front Axle Hub Assembly	
Disassembly and Assembly.....	26-11
Inspection.....	26-12
Front Floor Console.....	52A-7
Front Impact Sensors.....	52B-163
Front Seat.....	52A-20
Front Seat Belt.....	52A-26
Front Side Marker Light.....	54A-78
Front Suspension	
Diagnosis.....	33-3
Front Wheel Alignment	
Check and Adjustment.....	33-7
Fuel Filler Lid.....	42-11
Fuel Gauge Unit	
Check.....	54A-73
Check.....	13B-10
Replacement.....	13B-10
Fuel Hose	
Check for Condition.....	00-40
Fuel Pipe	
Check for Leaks.....	00-40
Fuel Pressure Solenoid	
Check.....	13A-879
Fuel Pressure Test.....	13A-865
Fuel Pump	
Connector Disconnection.....	13A-868
Operation Check.....	13B-9
Operation Check.....	13A-868
Fuel Pump Module.....	13B-17
Fuel Pump Module	
Replacement.....	13B-9
Fuel Pump Relay	
Continuity Check.....	13A-870

Fuel Pump Resistor		Hood Striker	
Check .....	13A-871	Alignment.....	42-6
Fuel Pump System .....	13A-789	Horn .....	54A-99
Fuel Supply		Horn	
Diagnosis.....	13B-2	Circuit Diagram .....	90-63
Fuel System		Hose	
Check for Leaks.....	00-40	Vacuum, Routing .....	17-8
Fuel Tank.....	13B-13	Hoses	
Fuel Tank		Brake, Check .....	00-50
Check for Leaks.....	00-40	Hub	
Fuel Tank Differential Pressure Sensor		Front Axle .....	26-8
Check .....	17-15	Rear Axle.....	27-16
Fuel Tank Filler Tube		Hub Bolt	
Check for Leaks.....	00-40	Replacement.....	26-6
Fuel Tank Pressure Relief Valve .....	17-21	Replacement.....	27-15
Fuel Tank Pressure Relief Valve		Hub End Play	
Inspection .....	17-22	Check.....	26-6
Fuel Warning Light		Hydraulic Unit .....	22A-237
Circuit Diagram.....	90-74	Hydraulic Unit .....	35B-111
Fuse		Hydraulic Unit Check	
Check .....	00E-9	ABS.....	35B-108
Fuses Location .....	70-5		
Fusible Links Location.....	70-5		

**G**

Garnish.....	51-7
Gauge	
Circuit Diagram.....	90-70
Gear Oil	
Replacement .....	27-14
Generator .....	11B-8
Generator	
Assembly .....	16-13
Output Current Test .....	16-7
Output Line Voltage Drop Test.....	16-6
Regulated Voltage Test.....	16-9
Glass Sliding Mechanism	
Check and Adjustment .....	42-33
Ground Location.....	70-2
G-sensor.....	35B-115

**H**

Hazard Warning Light	
Circuit Diagram.....	90-66
Hazard Warning Switch .....	54A-93
Headlight .....	54B-272
Headlight .....	54A-78
Headlight	
Aiming.....	54A-81
Circuit Diagram	
DISCHARGE TYPE .....	90-42
HALOGEN TYPE.....	90-46
Headlight Leveling System	
Circuit Diagram.....	90-50
Headlining .....	52A-18
Heater	
Circuit Diagram.....	90-92
Heater Control	
Disassembly and Assembly.....	55-101
Heater Control Assembly .....	55-99
Heater Core.....	55-103
Heater Unit.....	55-103
High-Mounted Stoplight.....	54A-92
Hood.....	42-4
Hood	
Aliment.....	42-6
Height Adjustment .....	42-6

**I**

Idle Mixture	
Check.....	11A-9
Idle Speed	
Basic, Adjustment .....	13A-864
Check.....	11A-10
Idle Speed Control Motor	
Check.....	13A-877
Ignition Circuit System.....	13A-813
Ignition Coil.....	16-39
Ignition Coil	
Check.....	16-33
Ignition Key Cylinder Illumination Light	
Circuit Diagram .....	90-56
Ignition Key Reminder Warning Buzzer	
Circuit Diagram .....	90-150
Ignition Switch .....	54A-6
Ignition System .....	16-32
Ignition System .....	11B-8
Ignition system.....	13A-807
Ignition System	
Circuit Diagram.....	90-30
Ignition Timing	
Check.....	11A-8
Immobilizer System	
Circuit Diagram .....	90-144
Diagnosis.....	54A-8
Injector.....	13A-881
Injector	
Check.....	13A-876
Injector Resister	
Check.....	13A-877
Input Shaft <W6MAA>.....	22C-23
Input Shaft <W5M51>.....	22B-16
Input Shaft	
Inspection <W5M51>.....	22B-22
Inspection <W6MAA> .....	22C-29
Inside Rear View Mirror .....	52A-19
Inspection Terminal Location .....	70-7
Instrument Panel .....	52A-3
Instrument Panel Inspection .....	00E-8
Intake Air Temperature Sensor	
Check.....	13A-871
Check.....	17-15
Intake and Exhaust	
Diagnosis .....	15-2

Intake Charge Pressure Control System			
Check .....	15-5		
Intake Manifold .....	11B-29		
Intake Manifold .....	15-9		
Intake Manifold Vacuum			
Check .....	15-4		
Interior Light .....	54B-401		
Interlock Switch			
Check and Adjustment .....	21A-8		
Operating Check.....	21A-8		
<b>J</b>			
Joint Connector .....	90-12		
Junction Block .....	90-10		
<b>K</b>			
Keyless Entry System .....	42-57		
Keyless Entry System .....	54B-169		
Keyless Entry System			
Diagnosis			
Vehicles with keyless entry system.....	42-57		
Secret Code Registration			
Vehicles with keyless entry system.....	42-63		
Transmitter Battery Replacement			
Vehicles with keyless entry system.....	42-59		
Keyless Entry System Timer			
Lock Function Inspection			
Vehicles with keyless entry system.....	42-59		
Knock Sensor .....	16-42		
Knock Sensor			
Check .....	16-33		
Knuckle			
Inspection .....	27-21		
Rear Axle.....	27-20		
<b>L</b>			
Lash Adjuster			
Check .....	11A-12		
Leveling Valve			
Check .....	13B-12		
License Plate Light.....	54A-93		
License Plate Light			
Circuit Diagram.....	90-52		
Lighting Monitor Buzzer			
Circuit Diagram.....	90-146		
Lighting System			
Diagnosis <Hazard warning light switch>.....	54A-94		
Diagnosis <Rear combination light>.....	54A-90		
Diagnosis <Headlight, front side marker light and position light assembly> .....	54A-78		
Diagnosis <Dome light> .....	54A-91		
Lower Arm <Rear suspension> .....	34-16		
Lower Arm <Front suspension> .....	33-14		
Lower Arm			
Inspection .....	33-15		
Lower Arm Ball Joint			
End Play Check.....	33-8		
Lower Arm Bushing			
Replacement .....	33-17		
Luggage Compartment Light			
Circuit Diagram.....	90-56		
Luminous Intensity			
Measurement.....	54A-84		
<b>M</b>			
Main Muffler.....	15-17		
Maintenance			
Air Cleaner Element.....	00-40		
Ball Joint and Steering Linkage Seals .....	00-51		
Brake Hoses .....	00-50		
Disc Brake Pads .....	00-50		
Drive Belt .....	00-41		
Driveshaft Boots .....	00-51		
Electrical System .....	00E-12		
Engine Coolant .....	00-48		
Engine Oil .....	00-43		
Engine Oil Filter .....	00-44		
Evaporative Emission Control System.....	00-40		
Exhaust System.....	00-43		
Fuel Hose .....	00-40		
Fuel System.....	00-40		
Spark Plug .....	00-41		
Timing Belt.....	00-41		
Transfer Oil.....	00-46		
Manifold Vacuum			
Check.....	11A-12		
Manual A/C			
Diagnosis .....	55-5		
Manual Transaxle			
Diagnosis			
M/T.....	22A-200		
Manual Transaxle (Transmission)			
Oil Level Check.....	00-45		
Manual Transaxle Overhaul			
Adhesive <W5M51> .....	22B-55		
Adhesive <W6MAA>.....	22C-48		
Sealant <W5M51> .....	22B-55		
Sealant <W6MAA> .....	22C-48		
Mark.....	51-33		
Master Cylinder .....	35A-26		
Master Cylinder			
Function Check.....	35A-24		
Master Cylinder Assembly.....	35A-26		
Master Cylinder Assembly			
Disassembly and Assembly.....	35A-28		
Inspection .....	35A-29		
Meter			
Circuit Diagram .....	90-70		
MFI			
Adhesive .....	13A-890		
Sealant.....	13A-890		
Tightening Specifications .....	13A-888		
MFI System			
Circuit Diagram .....	90-32		
Mirror			
Door.....	51-35		
Remote Controlled, Circuit Diagram .....	90-105		
Module			
Fuel Pump .....	13B-17		
Molding.....	51-7		
Mounting			
Engine.....	32-3		
Transaxle .....	32-5		
Multiport Fuel Injection			
Diagnosis.....	13A-12		
Multiport Fuel Injection Relay			
Continuity Check.....	13A-870		

## O

Oil	
Engine, Change	00-43
Engine, Check	12-3
Engine, Replacement	12-3
Transfer, Change	00-46
Oil Cooler	
Engine	12-6
Oil Filter	
Engine, Replacement	12-4
Oil Pan	11A-36
Oil Pan	
Inspection	11A-38
Overhaul	11B-51
Oil Pressure	
Engine, Check	12-4
Oil Pressure Warning Light	
Circuit Diagram	90-74
Oil Pump	
Overhaul	11B-51
Power Steering	37-49
Power Steering, Pressure Test	37-21
Oil Seal	
Crankshaft	11A-39
Output Shaft	22B-24
Output Shaft	
Inspection	22B-32
Oxygen Sensor	
Check	13A-874

## P

Parking Brake	
Cable	36-7
Diagnosis	36-2
Lever	36-6
Lever Stroke Check and Adjustment	36-4
Lining and Drum	36-8
Lining Running-in	36-5
Switch Check	36-5
Parking Brake Lining	
Inspection	36-10
PCV (Positive Crankcase Ventilation) System	17-10
PCV (Positive Crankcase Ventilation) System	
Valve Check	17-11
Pedal	
Accelerator	17-5
Piston	
Overhaul	11B-61
Position Light	54A-78
Position Light	
Circuit Diagram	90-52
Power Distribution System	
Circuit Diagram	90-24
Power Steering	
Bleeding	37-20
Diagnosis	37-3
Drive Belt Tension Check	37-19
Fluid Level Check	37-19
Fluid Replacement	37-20
Hoses	37-52
Oil Pump Assembly	37-49
Oil Pump Pressure Test	37-21
Pressure Switch Check	37-22
Power Steering Diagnosis	37-3
Power Steering Gear Box	37-31
Power Steering Linkage	37-31
Power Steering Oil Pump Assembly	
Inspection	37-51

Power Window	
Check	
Vehicles with power window	42-34
Circuit Breaker Inspection	
Vehicles with power window	42-34
Circuit Diagram	90-76
Diagnosis	
Vehicles with power window	42-24
Operating Current Check	
Vehicles with power window	42-33
Relay Check	
Vehicles with power window	42-34
Timer Function Check	
Vehicles with power window	42-33
Power Windows	54B-113
Printed-Heater Lines	
Check	54A-172
Propeller Shaft	25-4
Propeller Shaft	
Adhesive	25-13
Diagnosis	25-2
Sealant	25-13
Proportioning Valve	
Function Test	35A-16
Purge Control System	
Check	17-13

## R

Radiator	14-23
Radiator Cap	
Pressure Check	14-18
Radiator Fan Motor	
Check	14-22
Radio	54A-104
Radio With Tape Player and CD Player, Speaker and Antenna	
Diagnosis	54A-104
Rear Axle	
Adhesive	27-57
Diagnosis	27-2
Driveshaft	27-22
Gear Oil Level Check	27-14
Hub	27-16
Knuckle	27-20
Sealant	27-57
Total Backlash Check	27-13
Wheel Bearing End Play Check	27-14
Rear axle oil	
Level Check	00-51
Rear Combination Light	54A-90
Rear End Crossmember Bar	
RS	42-12
Rear Floor Console	52A-8
Rear Seat	52A-22
Rear Seat Belt	52A-27
Rear Spoiler	51-16
Rear Suspension	34-8
Rear Suspension	
Diagnosis	34-3
Rear Washer	
GSR	54B-238
Rear Wheel Alignment	
Check and Adjustment	34-6
Rear Window Defogger	54A-172
Rear Window Defogger	
Circuit Diagram	90-101
Rear Window Glass	42-21
Rear Wiper	
GSR	54B-238

Rear Wiper and Washer		
Inspection .....	51-31	
Receiver Drier Test (A/C) .....	55-93	
Relay .....	22A-239	
Relay		
Check .....	00E-11	
Relay Location .....	70-6	
Replaceable Bulb		
Replacement .....	54A-85	
Resistive Cord		
Inspection .....	16-35	
Reverse Idler Gear <W6MAA> .....	22C-32	
Reverse Idler Gear <W5M51> .....	22B-35	
Rheostat .....	54A-95	
Rheostat		
Circuit Diagram .....	90-155	
RKE (Keyless Entry System) .....	42-57	
RKE (Keyless Entry System)		
Secret Code Registration		
Vehicles with keyless entry system .....	42-63	
Transmitter Battery Replacement		
Vehicles with keyless entry system .....	42-59	
Rocker Arm		
Overhaul .....	11B-35	
Roof Lid Glass		
Operation Check .....	42-69	
<b>S</b>		
Sealant		
Body .....	42-77	
Brakes (Basic) .....	35A-39	
Engine .....	11A-64	
Engine Cooling .....	14-32	
Engine Lubrication .....	12-7	
Engine Overhaul .....	11B-82	
Equipment .....	54A-176	
Exterior .....	51-39	
Manual Transaxle Overhaul <W5M51> .....	22B-55	
Manual Transaxle Overhaul <W6MAA> .....	22C-48	
MFI .....	13A-890	
Propeller Shaft .....	25-13	
Rear Axle .....	27-57	
Steering .....	37-57	
Sealant Table .....	00-53	
Seat Belt		
Diagnosis .....	52A-2	
Seat Belt Pre-Tensioner		
Disposal Procedures .....	52B-180	
Seat Belt Tone Alarm		
Circuit Diagram .....	90-148	
Seat Belt Warning Light .....	54B-260	
Seat Belts With Pre-Tensioner .....	52B-176	
Seat Belts With Pre-Tensioner		
Check .....	52B-180	
Select Lever .....	22B-37	
Sensor .....	22A-239	
Sensor		
ABS .....	35B-113	
Barometric Pressure, Check .....	17-15	
Camshaft Position .....	16-40	
Camshaft Position, Check .....	16-35	
Crankangle, Check .....	16-35	
Crankshaft Position .....	16-41	
Crankshaft Position, Check .....	17-20	
Engine Coolant Temperature, Check .....	17-15	
Engine Coolant Temperature, Check .....	13A-872	
Fuel Tank Differential Pressure, Check .....	17-15	
Intake Air Temperature, Check .....	13A-871	
Intake Air Temperature, Check .....	17-15	
Knock .....	16-42	
Knock, Check .....	16-33	
Oxygen, Check .....	13A-874	
Steering Angular Velocity .....	35B-117	
Throttle Position, Adjustment .....	13A-862	
Throttle Position, Check .....	13A-873	
Volume Air Flow, Check .....	17-15	
Wheel Speed, Output Voltage Check .....	35B-106	
Sensor Location .....	70-8	
Shift Lever Assembly		
W5M51 .....	22A-218	
Disassembly and Assembly		
W5M51 .....	22A-218	
Shock Absorber .....	34-20	
Shock Absorber Assembly		
Disassembly and Assembly .....	34-21	
Side Marker Light		
Circuit Diagram .....	90-52	
Sight Glass (Refrigerant Level Test) .....	55-93	
Snap Rings		
Adjustment <W5M51> .....	22B-56	
Adjustment <W6MAA> .....	22C-48	
Solenoid		
EGR, Check .....	17-19	
EGR, Check .....	13A-880	
Evaporative Emission Purge, Check .....	13A-880	
Evaporative Emission Ventilation, Check .....	13A-880	
Solenoid Location .....	70-15	
Solenoid Valve Location .....	70-15	
Spacers		
Adjustment .....	22B-56	
Adjustment .....	22C-48	
Spark Plug		
Check and Adjustment .....	16-35	
Replace .....	00-41	
Speaker .....	54A-168	
Speaker		
Test .....	54A-165	
Specifications .....	34-28	
Speedometer Check		
Check .....	54A-72	
Speedometer Gear .....	22B-36	
SRS		
Circuit Diagram .....	90-140	
SRS Air Bag		
Diagnosis .....	52B-18	
SRS Control Unit (SRS-ECU) .....	52B-166	
SRS Warning Light Check .....	52B-20	
Stabilizer Bar <Front suspension> .....	33-19	
Stabilizer Bar <Rear suspension> .....	34-25	
Starter Motor		
Assembly .....	16-24	
Starter Relay		
Check .....	16-23	
Starting System .....	16-21	
Starting System		
Circuit Diagram .....	90-29	
Diagnosis .....	16-22	
Steering		
Adhesive .....	37-57	
Ball Joint Dust Cover Inspection .....	37-23	
Removal and Installation .....	37-24	
Sealant .....	37-57	
Steering Angular Velocity Sensor .....	35B-117	
Steering Column Shaft Assembly Shock Absorbing Mechanism		
Check .....	37-23	
Steering Gear Shaft Assembly .....	37-26	
Steering Linkage Seals		
Check .....	00-51	



Steering Wheel .....	37-24	Fuel Supply .....	13B-21
Steering Wheel		Intake and Exhaust .....	15-18
Free Play Check .....	37-16	Manual Transaxle .....	22A-241
Stationary Steering Effort Check .....	37-18	MFI .....	13A-888
Steering Angle Check .....	37-17	Parking Brake .....	36-10
Steering Wheel Return to Center Check .....	37-19	Power Plant Mount .....	32-12
Stoplight		Propeller Shaft .....	25-12
Circuit Diagram .....	90-64	Rear Axle .....	27-54
Strut Assembly .....	33-9	SRS Air Bag .....	52B-193
Strut Assembly		Steering .....	37-55
Disassembly and Assembly .....	33-10	Transaxle Overhaul <W6MAA> .....	22C-47
Inspection .....	33-9	Transaxle Overhaul <W5M51> .....	22B-54
Strut Tower Bar .....	42-12	Wheel and Tire .....	31-6
Sunroof .....	42-72	Tightening Torque .....	00-30
Sunroof		Timing Belt .....	11A-48
GSR .....	42-66	Timing Belt	
GSR .....	54B-187	Overhaul .....	11B-11
Check .....	42-68	Replace .....	00-41
Circuit Diagram .....	90-152	Tire .....	31-6
Diagnosis .....	42-66	Tire	
Fit Adjustment .....	42-67	Diagnosis .....	31-2
Initialized Check .....	42-69	Inflation Pressure Check .....	31-6
Operation Check .....	42-70	Rotation .....	00-52
Safety Function Check .....	42-68	Wear Check .....	31-6
Timer Function Check .....	42-67	Tone Alarm .....	54B-67
Water Test .....	42-67	Trailing Arm .....	34-13
Suspension System		Transaxle <W6MAA> .....	22C-7
Inspect for Looseness and Damage .....	00-51	Transaxle <W5M51> .....	22B-6
Switch .....	22A-239	Transaxle Mounting	
Switch		Inspection .....	32-6
Check .....	00E-10	Transaxle Assembly .....	22A-228
SWS		Transaxle Control .....	22A-214
Diagnosis .....	54B-9	Transaxle Mounting .....	32-5
General Information .....	54B-2	Transaxle Oil	
SWS Monitor		Level Check .....	22A-207
How to Use .....	54B-12	Replacement .....	22A-207
		Transfer <W6MAA> .....	22C-45
		Transfer <W5M51> .....	22B-52
		Transfer	
		Oil Change .....	00-46
		Transfer Assembly .....	22A-223
		Transfer Oil	
		Change .....	00-46
		Check .....	22A-207
		Replacement .....	22A-208
		Transmission Case <W6MAA> .....	22C-39
		Transmission Case <W5M51> .....	22B-45
		Transponder	
		Lock Check .....	54A-44
		Trims .....	52A-11
		Trouble Code, ABS	
		Diagnosis .....	35B-5
		Trunk Lid .....	42-50
		Trunk Lid	
		Adjustment .....	42-51
		Clearance Adjustment .....	42-52
		Diagnosis .....	42-50
		Height Adjustment .....	42-53
		Trunk Lid Latch	
		Inspection .....	42-57
		Trunk Lid Striker	
		Adjustment .....	42-53
		Turbo Charger Wastegate Solenoid	
		Check .....	13A-880
		Turbocharger .....	15-13
		Turbocharger	
		Intake Charge Pressure Check .....	15-4
		Turbocharger Bypass Valve	
		Check .....	15-6

## T

Tachometer			
Check .....	54A-73		
Taillight .....	54B-272		
Taillight			
Circuit Diagram .....	90-52		
Tape Player .....	54A-104		
Tension Pulley .....	55-111		
Thermostat .....	14-25		
Throttle Body .....	13A-884		
Throttle Body			
Assembly .....	13A-883		
Cleaning .....	13A-862		
Throttle Position Sensor			
Adjustment .....	13A-862		
Check .....	13A-873		
Tie Rod End			
Steering, Ball Joint Breakaway Torque Check .....	37-17		
Steering, Ball Joint Dust Cover Replacement .....	37-48		
Tightening Specifications			
Basic Brakes .....	35A-37		
Charging System .....	16-43		
Clutch .....	21A-13		
Clutch Overhaul .....	21B-9		
Emission Control .....	17-25		
Engine .....	11A-61		
Engine Cooling .....	14-31		
Engine Lubrication .....	12-7		
Engine Overhaul .....	11B-76		
Exterior .....	51-39		
Front Axle .....	26-24		
Front Suspension .....	33-23		

- Turbocharger Waste Gate Solenoid
  - Check ..... 15-5
- Turn Signal Light
  - Circuit Diagram ..... 90-66
- Turn-signal Light ..... 54A-89

- Wiper and Washer
  - Rear ..... 51-29
  - Rear
    - GSR ..... 51-28
  - Rear, Circuit Diagram ..... 90-102
  - Windshield ..... 51-17

**U**

- Upper Arm ..... 34-10

**V**

- Vacuum Check
  - EGR Port ..... 17-18
- Vacuum Circuit Diagram ..... 17-9
- Vacuum Hose
  - Check ..... 17-10
- Vacuum Hose Routing ..... 17-8
- Vacuum Hoses ..... 17-8
- Valve
  - EGR System, Check ..... 17-18
  - Fuel Tank Pressure Relief ..... 17-21
  - Fuel Tank Pressure Relief, Inspection ..... 17-22
  - Proportioning, Function Test ..... 35A-16
- Valve Stem Seal ..... 11A-25
- Vehicle Identification ..... 00-16
- Vehicle Identification Code Plate ..... 00-17
- Vehicle Speed Sensor ..... 54A-48
- Ventilators ..... 55-120
- Volume Air Flow Sensor
  - Check ..... 17-19
  - Check ..... 17-15

**W**

- Waste Gate Actuator
  - Check ..... 15-4
- Water Hose ..... 14-29
- Water Hose ..... 11B-33
- Water Pipe ..... 14-29
- Water Pump ..... 11B-33
- Water Pump ..... 14-27
- Wheel ..... 31-6
- Wheel
  - Balance Accuracy ..... 31-3
  - Diagnosis ..... 31-2
  - Runout Check ..... 31-6
- Wheel Bearing End Play Check ..... 27-14
- Wheel Speed Sensor
  - Output Voltage Check ..... 35B-106
- Wind Noise
  - How to Locate ..... 42-28
- Window Glass ..... 42-13
- Window Glass
  - Diagnosis ..... 42-14
  - Door, Adjustment ..... 42-32
  - Runchannel ..... 42-47
- Windshield ..... 42-16
- Windshield
  - Wiper and Washer ..... 51-17
- Windshield Intermittent Wiper
  - Volume Check ..... 51-20
- Windshield Washer ..... 54B-202
- Windshield Washer ..... 51-26
- Windshield Wiper ..... 51-21
- Windshield Wiper ..... 54B-202
- Windshield Wiper and Washer
  - Circuit Diagram ..... 90-98