


Mitsubishi Evo 1 - 3 ECU Connections

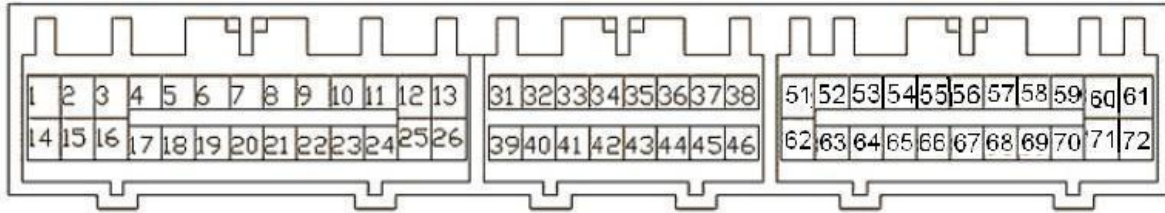

View on wire side

1	INJECTOR 1	Y - L		31	IGN AMP TACHO SIG W		51	START	B - Y	
2	INJECTOR 3	L - G		32			52	AIR TEMP	R - B	
3	RADIATOR FAN	G - B		33	FUEL PRESS SOL W - B		53			
4	IDLE SERVO 1	L		34	OCTANE ADJUST B - L		54	EXHAUST TEMP +	R	
5	IDLE SERVO 4	W		35			55			
6	SEC AIR SOL	G - W		36	ECU W/L LG - R		56	LAMBDA	W	
7				37	PAS SWITCH Y		57	EXHAUST TEMP -	W	
8	FUEL PUMP RELAY	W - R		38	ECU RELAY B - L		58	KNOCK SENSOR	W	
9	ALARM W/L	L - B		39			59			
10	IGN AMPLIFIER A	Y - W		40	WASTE GATE SOL L - W		60	BACK UP SUPPLY	B - Y	
11	FAN RELAY	G - W		41	TURBO W/L * G - B		61	VREF 5V	G - R	
12	12V SW SUPPLY	R		42	DIAGNOSTICS Y		62	IGN SW SUPPLY	B - W	
13	GROUND	B		43	DIAGNOSTICS G - W		63	WATER TEMP	Y - G	
14	INJECTOR 2	Y - B		44			64	TPS	G - W	
15	INJECTOR 4	LG - W		45	A/C COMP RELAY G - Y		65	BARO PRESS	P	
16	RADIATOR FAN	L - Y		46			66	ROAD SPEED	Y - W	
17	IDLE SERVO 3	Y					67	IDLE SWITCH	Y - R	
18	IDLE SERVO 6	G					68	TDC SENSOR	W	
19	AIR FLOW RESET	L					69	CRANK SENSOR	B	
20							70	AIR FLOW SENSOR	W - B	
21							71	GROUND	B	
22	A/C COMP RELAY	B - W					72	SENSOR GROUND	B	
23	IGN AMPLIFIER B	Y - R								
24	REAR SCREEN "ON"	B - L								
25	12V SW SUPPLY	R								
26	GROUND	B								

* Evo 1 only