


Mitsubishi Evo IV ECU Connections

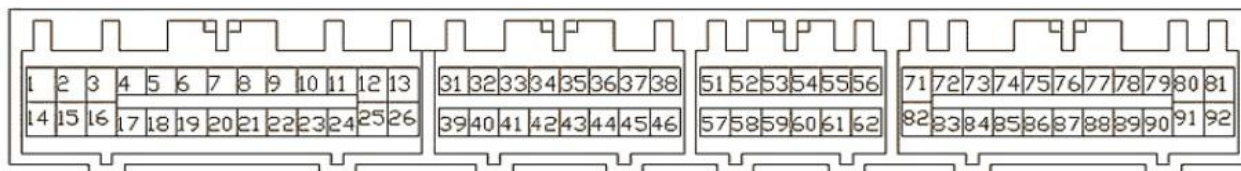

View on wire side

1 INJECTOR 1	Y - L		31 N/C		51 N/C		71 START	B - Y	
2 INJECTOR 3	L - G		32 N/C		52 N/C		72 AIR TEMP	R - L	
3 FUEL PRESS SOL	W - B		33 ALTERNATOR G	L - W			73 N/C		
4 IDLE SERVO 1	L - Y		34 N/C		53 N/C		74 EXHAUST TEMP +	P	
5 IDLE SERVO 4	W		35 N/C		54 N/C		75 N/C		
6 SEC AIR SOL	BR		36 ECU W/L	LG - B			76 LAMBDA	W	
7 N/C			37 PAS SWITCH	Y - B			77 EXHAUST TEMP -	W - L	
8 FUEL PUMP RELAY	B - L		38 ECU RELAY	R			78 KNOCK SENSOR	W	
9 N/C			39 FUEL PUMP (SPEED) L				79 N/C		
10 IGN COIL 1	B - Y		40 ALARM W/L	L - W			80 BACK UP SUPPLY	R - B	
11 WASTE GATE SOL	BR - W		41 ALTERNATOR FR	W			81 VREF 5V	G - L	
12 12V SW SUPPLY	R - Y		42 N/C				82 IGN SW SUPPLY	B - W	
13 GROUND	B		43 N/C				83 WATER TEMP	Y - G	
14 INJECTOR 2	Y - B		44 N/C				84 TPS	G - W	
15 INJECTOR 4	LG - W		45 A/C PRESS SW	G - B			85 BARO PRESS	Y - W	
16 N/C			46 N/C				86 ROAD SPEED	Y	
17 IDLE SERVO 3	Y						87 IDLE SWITCH	Y - R	
18 IDLE SERVO 6	G						88 CAM SENSOR	L - R	
19 AIR FLOW RESET	L						89 CRANK SENSOR	BR - G	
20 RAD & A/C FAN HI	L						90 AIR FLOW SENSOR	W - R	
21 RAD FAN LO	L						91 GROUND	B	
22 A/C COMP RELAY	G - W						92 SENSOR GROUND	B	
23 IGN COIL 2	B - G								
24 N/C									
25 12V SW SUPPLY	R - Y								
26 GROUND	B								